

INSTRUCTION MANUAL FOR HAND GRANULE SPREADER MODEL MG-10

- 1 Simple to install on and off the body. 2 Easy to operate by hand.
- 3 Ready to use taking out of the package. 4 Versatile to use anywhere.

HOW TO MOUNT AND OPERATE:

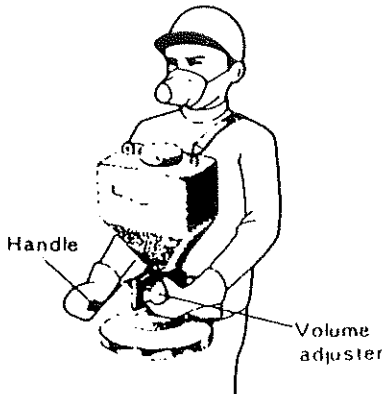


Fig-1

1. Screw the handle onto the handle shaft.
2. Position the volume adjuster on the knotch 0 (Zero) to close the aperture entirely.
3. Fill the tank with granule chemicals, fertilizer or seeds and tighten the tank lid securely.
4. Use a mask, if necessary, according to the chemicals to be used.
Note: The mask is non-standard accessory.
5. Fit up the strap diagonally from left to right or vice versa. (Cf. Fig-1 & 2)

6. While rotating the handle by your right hand, hold the volume adjuster by your left hand. (Cf. Fig-1 & 3)
7. Click forward the volume adjuster knotch by knotch, and the granule will flow out more and more according to the increased number from 0 to 10.
8. To stop the operation, click the volume adjuster back to 0 (Zero).
9. Spreading direction is adjusted by the direction adjuster on the propeller cover.

Turn the direction adjuster right and left.

The best number to spread the granule differs up to the kinds of granule to be used. It can be told by trial and experience.

Select the best number each time of application of the granule.

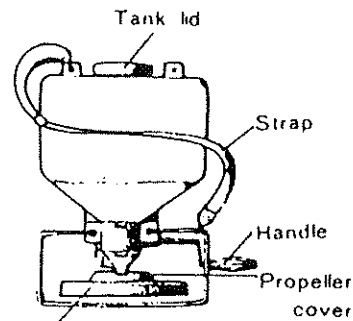


Fig-2

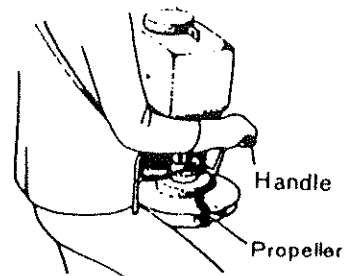


Fig-3